


Expander Interface Adapter (T8312)

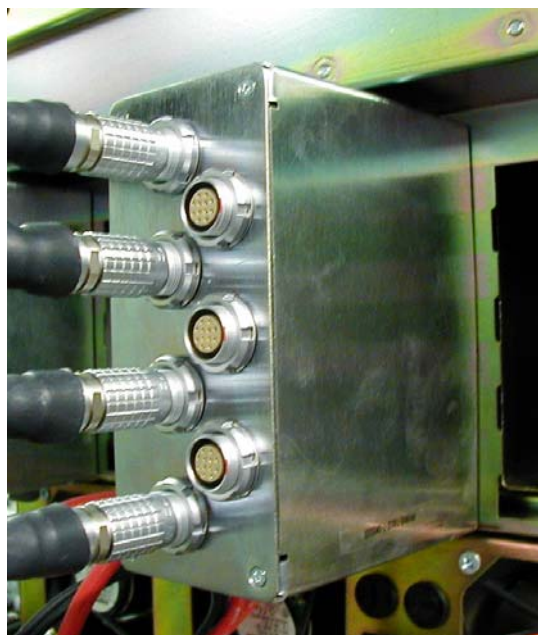

The expander interface adapter provides the connection between the expander interface modules in the controller chassis and processor interface modules in expander chassis.

There are two adapters available. The T8312/4 connects up to four expander chassis. The T8312/7, shown in Figure 5-7, connects up to seven expander chassis.

With the controller chassis dip switches set to ID #1, the first seven expander chassis would have their dip switch ID #s set from 2 to 8. Another interface adapter would be used to connect to the next seven chassis. Those chassis also need their dip switch ID #s set from 2 to 8, although they would be designated 9 to 15 in the software configuration (.ini file) described in Section 8.

Figure 5-7 Expander Interface Adapter



Figure 5-8 Expander Interface Adapter (Front View)



Figure 5-9 Expander Interface Adapter (Rear View)