

Table 8 - Terminal Block Assignments (continued)

No.	Name	Description
47	Relay Common	Relay Common contact
48	Relay N.O.	Relay Normally Open contact
49	Reserved	
50	Reserved	
51	Reserved	

1 Terminals are internally connected and isolated from the chassis terminals.

Mount the Module

The XM-124 Standard Dynamic Measurement Module (catalog number 1440-SDM02-01RA) is used only with the 1440-TB-A/C terminal base.




WARNING: An electric arc can occur if you do the following:

- Insert or remove the module while backplane power is on
- Connect or disconnect wiring while the field-side power is on

An electric arc can cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

IMPORTANT To help protect the serial connector and electronics when the serial port is not in use, install the overlay slide label.

1. Make sure the keyswitch (D) on the terminal base (E) is at position 1 as required for the module.

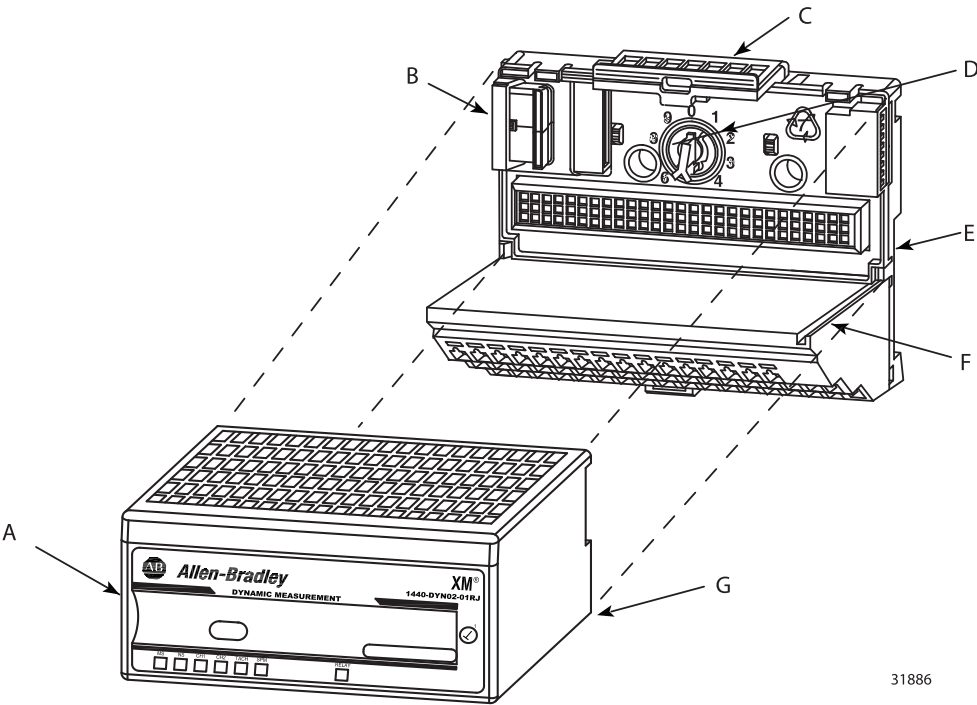

31886

2. Make sure the side connector (B) is pushed fully to the left.